



Boosternet is used to connect DCC boosters only  
 Pins 1 and 6 (Railways) are connected to the command station  
 Pins 2,3,4,5 are NOT connected to the command station

Throttlenet is used to connect all loconet devices (except boosters)  
 Only pins 2,3,4,5 are connected to the command station  
 Auxiliary throttle power is connected to pins 1 and 6 AFTER the command station  
 Return path is through pins 2 and 5 (ground) of throttlenet.  
 Care must be taken to avoid connecting the modified throttlenet to command station.  
 A connection of auxiliary power applied to pins 1 and 6 will damage the command station.

Additional AC power supplies may be added as needed.  
 On module accessories may also be connected to the Brown Line.





